DREAMCATCHER WS-17 Massage Chair

Owner's Manual









DREAMCATCHER WS-17 Massage Chair Introduction

- 1. Dreamcatcher's 3D Advanced MassageWave technology helps you enjoy the feeling of a professional masseuse right at home.
- Using its automatic ShapeDetect system at the beginning of each session,
 Dreamcatcher delivers an optimized massage for people of all sizes.
- Dreamcatcher can be easily placed in ZeroG mode to evenly disperse your weight throughout your spine to alleviate back pain.
- 4. Dreamcatcher's special air pressure design will promote blood circulation and restore vitality and energy.
- 5. Dreamcatcher's legrest can extend and the feet can be adjusted to any angle you need for maximum comfort.
- 6. Dreamcatcher comes with a high-definition VFD remote control that will display various parts of the body, massage techniques, and status updates simultaneously to help you optimize your time in the chair.
- 7. Using its HeatTherapy feature, Dreamcatcher promotes blood circulation and pain relief.
- 8. Dreamcatcher contains an SD card slot that you can use to play relaxing music (in MP3 format) through the chair's speakers or your own pair of headphones.

2. 3. 4.	Thank you for choosing the Dreamcatcher WS-17 Massage Chair. Please read this manual carefully before using the chair. Please keep this manual in a safe place for future reference. Please pay attention to the SAFETY INSTRUCTIONS. Note: We reserve the right to design modification, which is subject to change without notice. The pictures in this manual are for reference only. Please refer to the actual product.
Preparation	Safety instructions
Installation	Installation
Massage Operation	Location placement [1] Remote control [8] Operating instructions 20 After massage 23
Maintenance	Cleaning
Miscellaneous	Troubleshooting guide 23 Technical data 23
	Please keep this manual in a safe place for future reference.

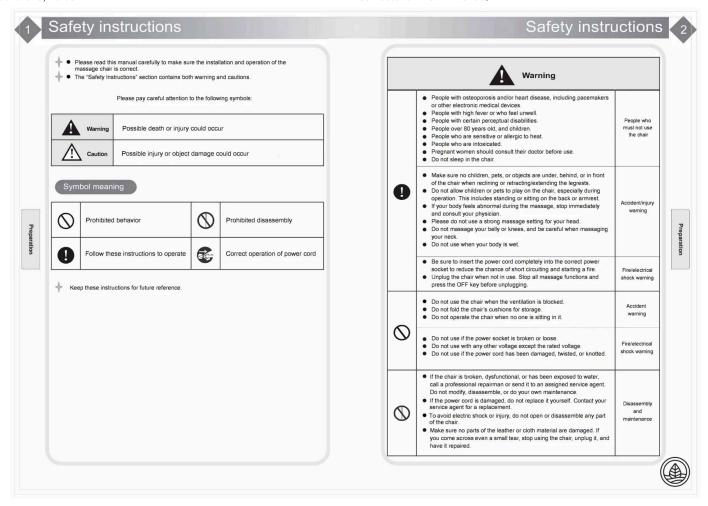

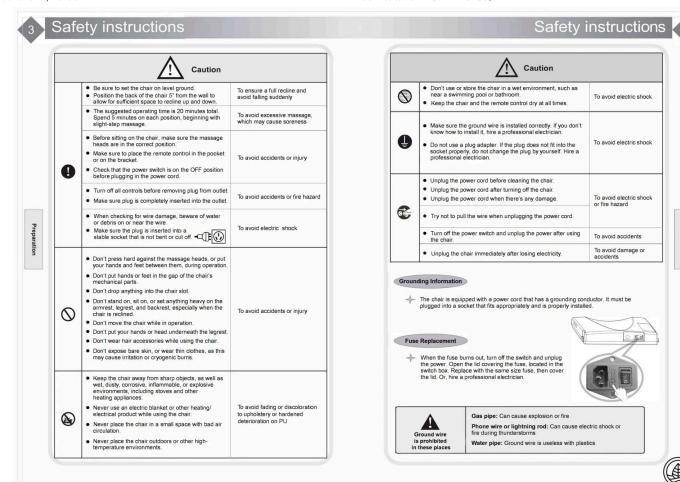




7 Schematics of mechanical parts

Mechanical parts list



Preparation

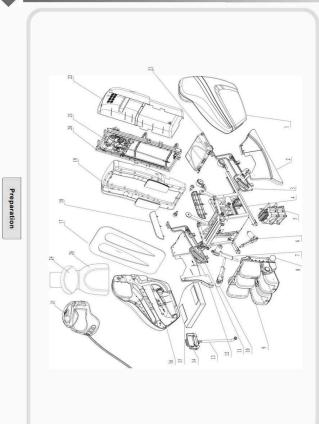


No.	Name	Qty	No	Name	Qty
1	Left armrest	1	22	Back cover	1
2	Left side panel	1	23	Power case	1
3	Left armrest mobile rack	1	24	Pillow	1
4	Seat	1	25	Head Massager	1
5	Gas case	1	26	Waist Cushion	1
6	Seat electric actuator	1			
7	Footrest electric actuator	1			
8	Caster	2			
9	Footrest	1			
10	Back electric actuator	1			
11	Right armrest mobile rack	1			
12	Right side panel	1			
13	Controller support bar and holder	1			
14	VFD controller	1			
15	Seat mat	1			
16	Right armrest	1			
17	Back mat	1			
18	Inner armrest panel	2			
19	Back plastomer	1			
20	Back frame	1			

9 Installation

Installation (10



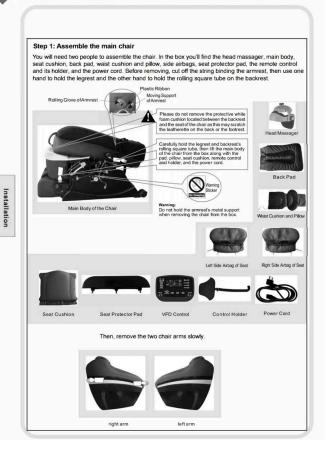






11 Installation

Installation 12



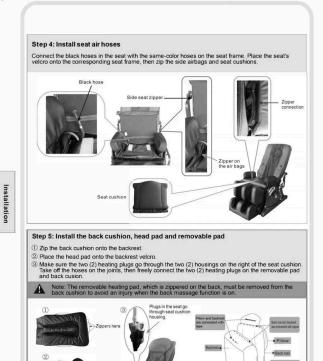





Installation



Location Placement



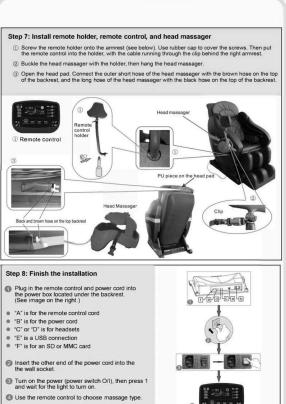

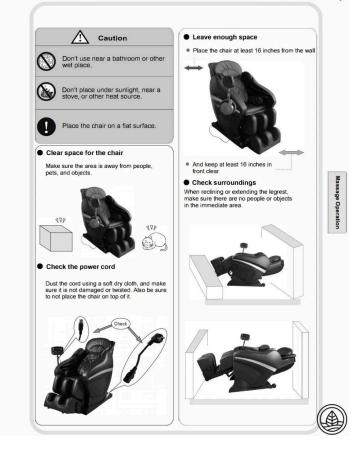




Massage Operation

Location Placement

Remote Control







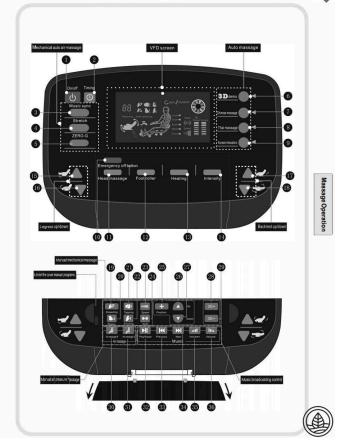



17 Remote control



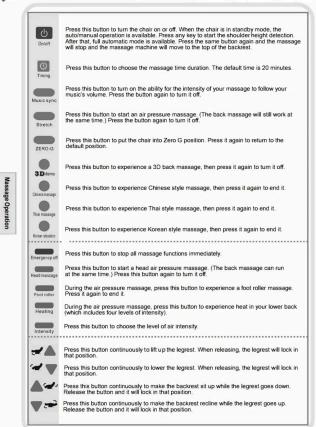

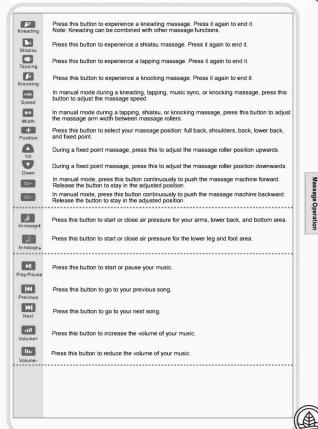

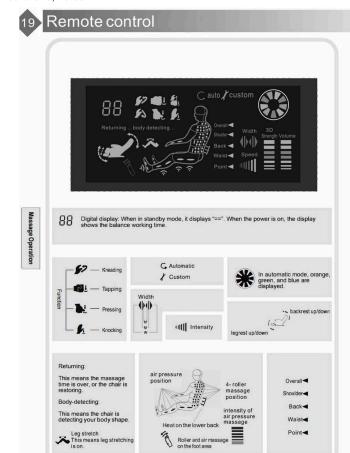

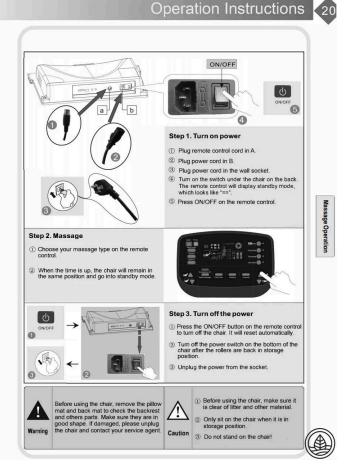



Massage Operation

21 Operation Instructions

After Massage 22








Clean and maintenance



Troubleshooting analysis



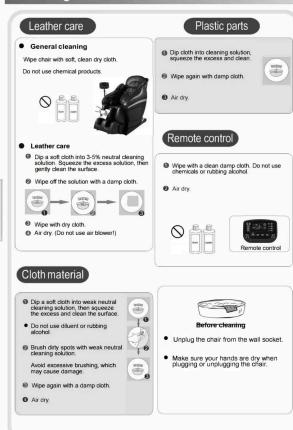

Problem	Possible reason	Troubleshooting	
	The power switch may not be turned on.	Press down on the power switch.	
	The massage program may not be selected.	Select the desired massage program.	
	The cord may not be connected properly.	Ensure a proper connection.	
The chair doesn't operate after being turned on	The cord may be damaged.	Contact your service agent.	
	The fuse may have burned out.	Replace fuse of same specification.	
	The inner circuit may have an issue.	Contact your service agent.	
Continual beeping sound	This sound is coming from the air pump, motor, and mechanical parts.	This is normal; no action needed.	
The left and right roller are different heights	The massage rollers work on shifts.	This is normal; no action needed.	
The chair sounds much	The massage parts may need a break due to long continual use.	Turn off the power for a half hour to let the chair rest.	
louder than normal	The inner parts may need to be serviced due to age. This is normal.	Contact your service agent.	
	The chair has powered down.	Connect the electricity again.	
The massage suddenly stops	The massage time is up.	Turn off the power for a half hour to let the chair rest.	
Neither the backrest nor the legrest move	Check for any obstacles in the way. For safety reasons, sometimes the chair will shut itself off.	Remove any obstacles. Turn off the power for a half hour to let the chair rest.	
The chair doesn't return to storage position	The chair has probably been in use for too long.	Contact your service agent.	
The remote control is hot	The remote control has been in use for too long.	Turn off the power for a half hour to let the chair and the remote rest.	
The cord is hot	It may be overloaded.	Turn off the power for a half hour to let the chair rest.	
	Something else might be wrong.	Contact your service agent.	
An aist an describ work	The airpipes may have gotten squeezed.	Reinstall the armrest; avoid squeezing the air pipe.	
An airbag doesn't work	The airpipes may not be connected well.	Reinstall the armrest; ensure a better connection.	



Note: If the problem is not caused by the reasons stated above, turn off the chair and unplug it from the wall. Then contact your service agent.



Input voltage

Safety design



Class I

280

Main body: 234/267 Armrest: 60/75

22.7 x 11.8 x 13.8 (main) 106.7 x 43.2 x 14.6 (armrest)

