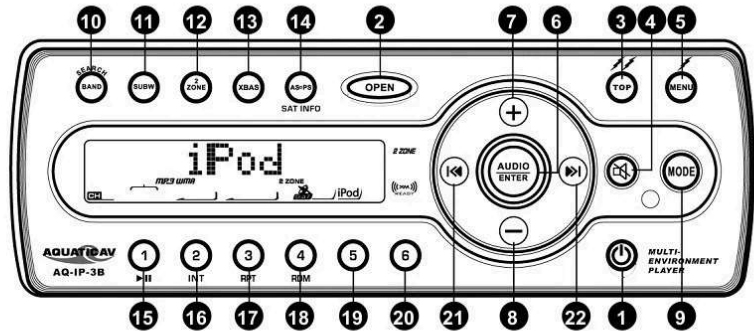


English

# Aquatic iPod® Stereo Quick-Reference Operation Card

## 1.0 Control Panel Functions

1. Power Button: Press button (or any other button except the Open button #2 once) to turn unit on. Press and hold to turn unit off.
2. Panel Open Button: Press button once to open front control panel.
3. Top Button: Not Used
4. Mute Button: Press to mute audio speaker output; press again to restore audio speaker output.
5. Menu Button: Not Used
6. Audio/Enter Button: Press repeatedly to navigate through audio setup menu features. Press Audio Up (+) or Audio Down Button (-) to adjust displayed audio setting. *Note: You can also press Tuning Up (▶) or Tuning Down (◀) buttons to navigate through the audio setup menu.*
7. Audio (+) Button: Increases audio speaker volume.
8. Audio (-) Button: Decreases audio speaker volume.
9. Mode Button: Press repeatedly to select operation mode: Tuner, AV IN-1, XM, or iPod.
10. Band Button: Press to select FM1, FM2, FM3, AM1, AM2 radio band or to enable iPod® search mode.
11. Subwoofer Button: Must be off for the factory installed passive subwoofer (used for powered subwoofers only).
12. 2 Zone Button: Not Used.
13. iX-Bass Button: Press button to enable the bass adjustment feature (display briefly reads "iX-Bass"), then press the (+) or (-) button within 5 seconds to select the Low, Med or High setting. Press the iX-Bass button a second time to disable feature.
14. AS-PS Button: Press to automatically scan and save the 6 strongest stations in the current FM or AM radio band or to display iPod® playback information.
15. Preset 1/Pause Button: Press and hold for 2 seconds to store station in tuner mode. Press and release to pause playback in iPod® mode (press again to restart music playback).
16. Preset 2/INT Button: Press and hold for 2 seconds to store station in tuner mode.
17. Preset 3/RPT Button: Press and hold for 2 seconds to store station in tuner mode. Press and hold for 3 or more seconds to enable the "REPEAT ALL" function in iPod® playback mode (press again for 3 seconds to disable function). Press and release in iPod® playback mode to enable the "REPEAT PLAY" function (press and release a second time to disable feature).
18. Preset 4/RDM Button: Press and hold for 2 seconds to store station in tuner mode. Press and hold for 3 seconds to enable the "SHUFFLE ALBUM" function in iPod® playback mode (press and hold again for 3 seconds to disable feature). Press and release button to enable "SHUFFLE PLAY" in iPod® playback mode (press and release again to disable feature).
19. Preset 5 Button: Press and hold for 2 seconds to store station in tuner mode.
20. Preset 6 Button: Press and hold for 2 seconds to store station in tuner mode.
21. Tuner/Track Down Button: Press to scan for next lower tuner station. Press to select previous music track in iPod® playback mode. Press and hold for 3 or more seconds to fast-reverse audio playback in iPod® mode.
22. Tuner/Track Up Button: Press to scan for next higher tuner station. Press to select next music track during iPod® playback mode. Press and hold for more than 3 seconds to fast-forward audio playback

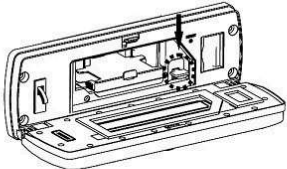
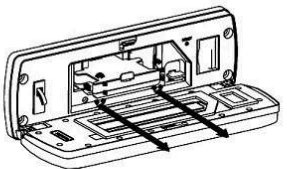
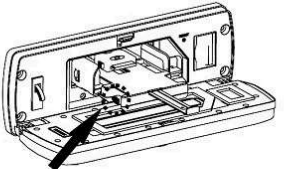
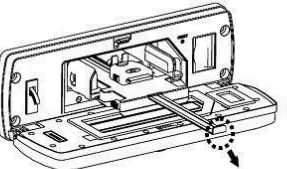
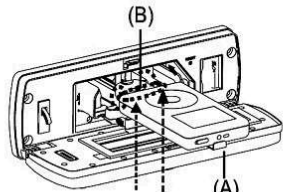
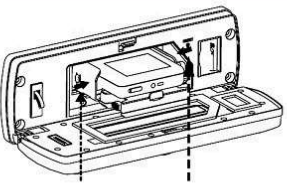
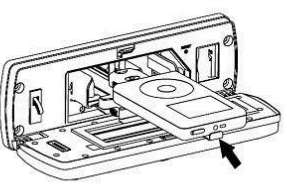
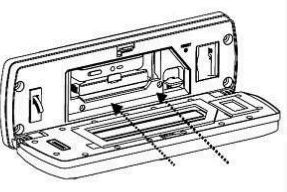
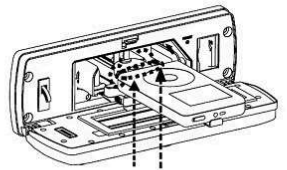
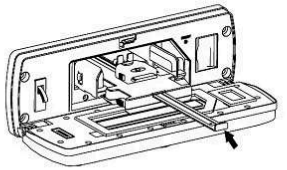
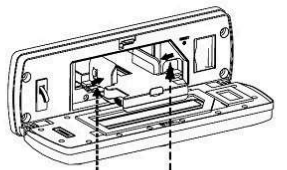
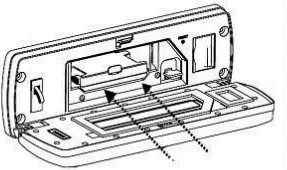


## English

in iPod® mode.

## 2.0 iPod® Installation

Follow the below steps to install your iPod® music player into the stereo docking station. *Note: Incorrect or improper installation may cause permanent damage to the docking station or the iPod® unit.*

iPod® Installation Procedure			
 <p>1. Press down on this button to unlock iPod® dock.</p>	 <p>2. Pull out iPod dock as illustrated. <u>DO NOT pull out the center connector stick for any reason.</u></p>	 <p>3. Press this button to unlock the iPod® retainer mechanism. <i>Note: some models do not have this feature.</i></p>	 <p>4. Pull out the iPod® connector stick as illustrated.</p>
 <p>5. Plug in iPod® (A) to the stereo connector (B).</p>	 <p>6. Push iPod® retainer brackets inward to secure device in place. <i>Note: some models do not have this feature.</i></p>	 <p>7. Push the iPod® connector stick inward until it stops.</p>	 <p>8. Push the iPod® dock inward until it stops.</p>
iPod® Removal Procedure			
Repeat steps 1-4 above to unlock and expose the docked iPod® player, then perform steps 5-8 below to remove iPod® from deck.			
 <p>5. Press inward on left and right iPod® connector buttons to release unit, then remove iPod®.</p>	 <p>6. Push the connector stick inward until it stops.</p>	 <p>7. Push the iPod® retainer brackets inward until they stop. <i>Note: some models do not have this feature.</i></p>	 <p>8. Push the empty iPod® dock inward until it stops.</p>



## English

### 3.0 iPod® Operation

#### 1. iPod® Power

Power is automatically applied to the iPod® after it is docked in the stereo deck. The iPod® battery automatically recharges, when docked. At this time, all iPod® controls are disabled and music playback is controlled from the front panel of the stereo. *Note: iPod® display reads "Ok To Disconnect" when docked.*

#### 2. Select iPod® Playback Mode

Press the MODE button on the front stereo panel. The display briefly reads **iPod**, then changes to **⏮ Reading** after several seconds (music playback starts automatically). *Note: At this time, you can press the front panel MODE Button repeatedly to select an alternate input source or to switch back to iPod® mode.*

#### 3. iPod® Display Information

This unit can display the Song, Artist, Album name and Elapsed time on the front stereo display. To display this information, press the AS/PS Button repeatedly while in iPod® playback mode.

#### 4. Select iPod® Search Mode

While in iPod® playback mode, press the BAND button to enter iPod® search mode, then repeatedly press this button to display the following search methods:

- Play List
- Artist
- Album
- Song
- Genre

Press the AUDIO button within 10 seconds to enable the displayed search method, then press the VOLUME ( + ) or ( - ) button within 10 seconds to navigate thru the files contained in the iPod. Press the AUDIO button to select & play the displayed song. *Note: Pressing the AS/PS button at this time quickly jumps back to the last upper level Album, Song, Play list etc.*

#### 5. iPod® Song Select

Press and release the Track UP (⏮) or Track DOWN (⏭) button to skip to the next or previous song. Press and hold The Track UP (⏮) or Track DOWN (⏭) button for more than 3 seconds to fast-forward or fast-reverse playback of the current song.

#### 6. iPod® Repeat All Playback

Press and hold the M3 button for more than 3 seconds during iPod® playback to enable the "REPEAT ALL" function. All songs in the current album will repeat playback until the function is disabled. To disable the "REPEAT ALL" function, press and hold the M3 Button for more than 3 seconds.

#### 7. iPod® Song Repeat

Press and release the M3 button to enable the "REPEAT PLAY" function. The current song will repeat until the function is disabled. To disable the "REPEAT PLAY" function, press the M3 button less than 3 seconds, then release.

#### 8. Shuffle iPod® Album

Press and hold the M4 button for 3 seconds during iPod® playback to enable the "SHUFFLE ALBUM" function. All albums contained on the iPod® will randomly playback. To disable function, press and hold the M4 button for more than 3 seconds, then release.

#### 9. Shuffle iPod® Songs

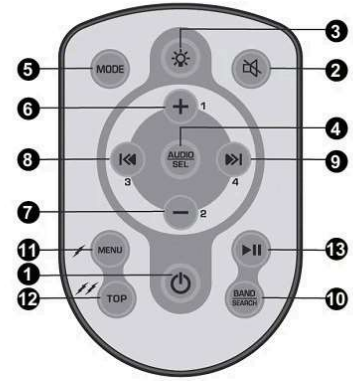
Press and hold the M4 button for 3 seconds during iPod® playback to activate the "SHUFFLE PLAY" function. All songs in the iPod® memory will playback in random order. To disable function, press and hold the M4 button for less than 3 seconds, then release.

## English

#### 4.0. Wireless Remote Functions

If the remote functions outlined below are non-responsive when attempting to operate the remote at a distance of 15 feet (45 meters) from your spa, refer to section 5.0 below for remote bonding instructions.

1. Power Button: Press once to activate the stereo deck; press again to turn stereo deck off.
2. Mute Button: Press once to mute audio speaker output; press again to re-enable audio speaker output.
3. Light Button: Press and hold for several seconds to activate white LED light (press and hold again to turn light off).
4. Audio/SEL Button: Press repeatedly to access most sound setup functions.
5. Mode Button: Press repeatedly to switch between Tuner, iPod® and Aux input modes.
6. Volume + Button: Press to increase audio speaker volume.
7. Volume - Button: Press to decreases audio speaker volume.
8. Seek/Track Down Button: Press to seek previous station in tuner mode. Press and hold to fast-reverse music playback in iPod® mode.
9. Seek/Track Up Button: Press to seek next station in tuner mode. Press and hold to fast-forward music playback in iPod® mode.
10. Band/Search Button: Press to select tuner band (FM1, FM2, FM3, AM1 or AM2).
11. Menu Button: Press repeatedly to access most stereo performance functions.
12. Top Button: Not Used.
13. Play/Pause Button: Press once to pause music playback in iPod® mode (press again to restart music playback).



#### 5.0 Bonding The Wireless Remote

The wireless remote must be bonded to the spa prior to operation. Position yourself within 15 feet (45 meters) of your spa, then perform the following steps to bond the remote.

1. Press and hold the 2) MUTE button for 5 seconds, then release; or
2. Quickly press and release the four corner buttons within 2 seconds: 1) MODE, 2) MUTE, 3) BAND/SEARCH, 4) TOP. *Note: These buttons must be pressed in the specified order to achieve bonding.*

